

OPERATING MANUAL FOR

MULTI FUNCTION METER

(Model: MFM 9012)



INDUSTRIAL CONTROLS & DRIVES (INDIA) PRIVATE LIMITED

Old No:10, New No:33, Mettukuppam Road, (Via Alappakam Road),
Maduravoyal, Chennai - 600 095.

Phone : 2378 1753/2378 0837 FAX : 91-44-2378 1431

E-mail : sales@icdipl.net website : www.icdipl.net

CONTENTS

1. General Features	3
2. Installation.....	4
3. Wiring Diagram.....	6
4. Front Panel Features.....	9
4.1 Key Description.....	10
4.2 Changing the configuration Items.....	10
5. Programming Instructions.....	11
6. RUN Mode display pages.....	13
7. Communication Port Details.....	15
7.1 Communication connection diagram.....	17
8 Technical specification (class 0.5 & Class 1)	18

MULTI FUNCTION METER

1. General Features

The Meter is designed with latest state of art technology. It offers high accuracy, reliability and also real value for money. This next generation micro controller based instruments monitors over 16 vital parameters and does not require any external Transducers. This instrument is most suitable for measuring all electrical parameters in 3 phase industrial applications. It replaces several meters like Voltmeters, Ammeters, Wattmeters Frequency meters. and selector switches for the above in an electrical panel.

The measured informations are shown on a 2 row 16 character LCD display with backlit. Four keys are provided on the front panel of the meter to access these information easily and quickly. The front panel is provided with antiglare feature for improved readability.

The measurement parameters include 3 phase voltage, 3 phase current, kW and kWh. All voltage, Current, Power and energy readings are true R.M.S including harmonics. The power and energy measurement is done for the full four quadrants. The energy reading is provided with reverse lock, showing only the imported energy consumed by the consumer. The meter computes and updates the parameters in every 2 seconds.

The meter is also provided with a optional RS485 optically isolated communication port supporting MOD BUS RTU protocol. The port is very useful in networking the meters in multidrop communication and to collect datas in a centralised control room using any standard SCADA Software package like cimplicity, intellution, wonderware & citech etc.

(Note : RJ45 Communication output, MODBUS ASCII is also available as ordering option.)

2. Installation

2.1. Mounting

The meter is housed in a compact ABS plastic enclosure of dimension 96(H) x 96(W) x 80(D)mm. The meter is suitable for panel mounting and has reliable mounting clamps to hold the meter to the panel.

The panel cut out for fixing the meter is a 92 x 92 mm. The depth behind the panel is 80 mm. Always provide extra space for the connectors and wiring. The panel cut out should be punched with proper tool and should be free from burrs. Insert the meter through panel cutout from front and fix the mounting clamps provided with the meter on each side. Tighten the fixing clamps with limit amount of force so as to hold the meter in position.

2.2. Wiring

2.2.1 Selection of PT & CT

The measurement of voltage and current is done using the PT voltage and CT current inputs. So the accuracy of measurement is determined by the accuracy and phase shift produced by the PT's and CT's so it is recommended to use PT's and CT's of instrument class 0.5 or better.

Also the PT's and CT's should have adequate VA rating to support the burden on the secondary side of them. The primary rating of the CT has to be selected such that the load variation lies between the dynamic range of the CT. (30% to 80% of the primary current).

2.2.2 Voltage signal connections

The Meter directly accepts voltages upto 415VAC R.M.S line to line (240VAC R.M.S line to neutral) with 10% over load capacity in case of LT meters and 110VAC R.M.S line to line (63.5 VAC R.M.S line to Neutral) with 10% over load capacity in case of HT meters. The primary of the PT is field programmable upto 330 kV.

There are four voltage input terminals marked as R, Y, B & N. The three phase input voltage should be connected to those terminals.

Meter voltage input burden : 0.25VA per phase

2.2.3 Current signal connections

The Meter current inputs can accept 5AAC R.M.S for connecting external CT's as standard. The Meter can also be provided with 1A AC R.M.S current inputs, in case the available CT in the field has 1A secondary. But it has to be specified while ordering. The CT Secondary value is not field programmable. In both the cases, the current inputs has over load capability of 120%.

There are three pairs of terminals marked as IR (M,L) IY (M,L) and IB (M,L) for the connection of external CT's. For proper measurements, the polarity of the CT's must be connected properly. The CT wiring must be properly done by deenergising the CT secondary by shorting it through a shorting block. The primary current of CT is field programmable upto 10000A.


Meter Current input burden : 0.25VA per phase

3. Wiring Diagram

3.1) Three phase four wire LT systems (3 watt measurement)

Voltage Input : Direct 240V AC P-N (-20% to +10%)


Current Input : 5/1A provide through 3 CT's

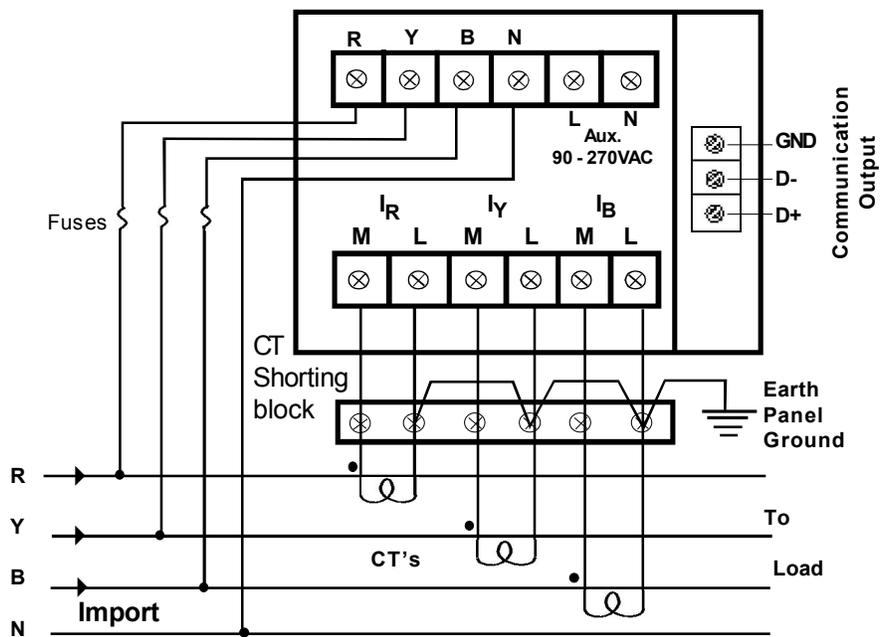

3.2) Three phase four wire HT systems (3 watt measurement)

Voltage Input : 110V AC (L - L)(Through PT)

Current Input : 5/1A provide through 3 CT's

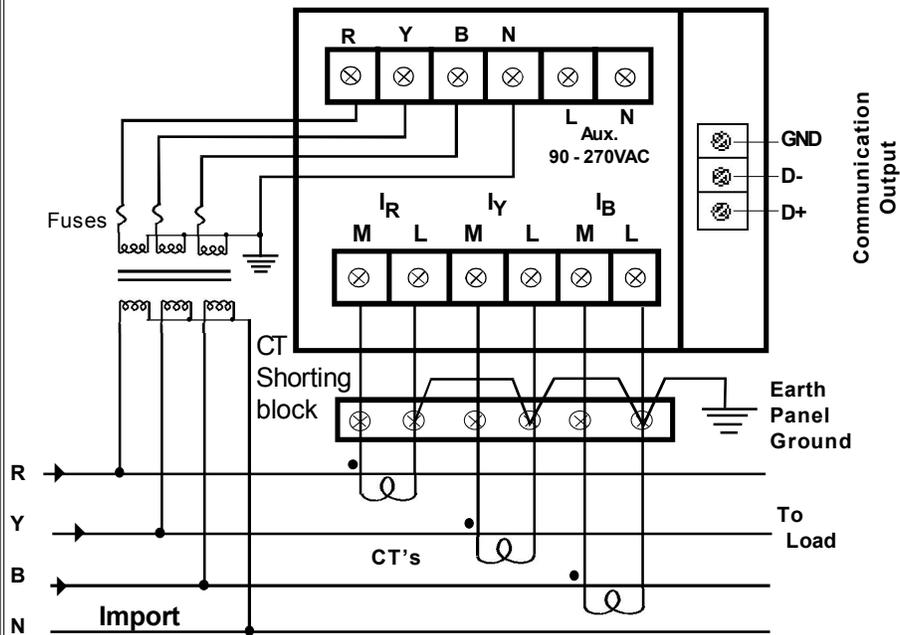

3.3) Auxiliary power supply connections

The Meter derives power from auxiliary power supply terminals which is separately provided in the meter. SMPS circuit is used to power up the meter so it can work from the range of 90 - 270V AC RMS. The auxiliary supply should be connected to proper specified voltage.

Burden on Auxiliary supply terminals : 4VA

3.4) Cross checking the wiring

Three phase voltage wiring and current wiring are to be properly done for correct measurements. Any wrong connections done either during installation or during rewiring can produce wrong measurement of electrical parameters. These incorrect wirings are difficult to detect since they produce wrong readings close to the expected readings.

The Meter has a built in program to identify the reverse sequences in PT as well as CT wiring. A separate diagnostic display page is provided to view the PT, CT Connections. IT can be selected by pressing the Shift Key repeatedly.

If the PT & CT wiring are done correctly. The diagnostic page as shows as


PT SEQ : RYB
CT REVR : NIL

Otherwise the phase in which voltage connections or current connections are wrongly connected is displayed.

While checking the wiring through the diagnostic page, make sure the load current is 10% above the full scale current and also the load is in import mode.

4. Front Panel Features

Multi Function meter

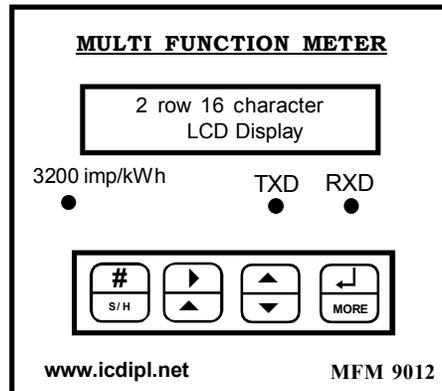

The LCD Display is a 2 row 16 character Alpha numeric display with backlit. The LCD Display is used to display voltage, current, kW, kWh, Run Hour, Frequency THD (if applicable) & program mode settings. The LCD backlit is switched off when no key is pressed for 3 minutes to save power and to enhance the life of LCD. The LCD backlit is switched ON, when any key is pressed.

The TxD and RxD LED's are provided to Indicate the activity in the communication port. The RxD LED flashes, whenever the data is received through communication port and the TxD LED flashes when data is transmitted from the meter. These LED's are not provided in the meters without communication port. Calibration pulse output is provided through 3mm RED LED in front panel. Meter constant is 3200 impulse/kWh.

The front panel is also provided with 4 keys. The key descriptions are given below. The keys are used to select the respective parameters in the normal operating mode and to configure various items in the program mode.

4.1 Key Description :

<u>Keys</u>	<u>Program mode</u>	<u>Normal operating mode</u>
	Index key (To select Menus)	SCRL/HLD (To switch between Scroll/Hold mode)
	Shift Key (To move between characters & to select parameters)	To increment Display pages
	Increment Key (To increment the selected digit & to select parameters)	To decrement Display pages
	Enter Key (To store the modifications & datas)	More Key (To view further sub pages)

4.2 Changing the configuration Items

In program mode, after selecting the configuration item through Index key, It can be altered by using shift, Increment & Enter key.

The shift (►) key is used to select the digit one by one. The selected digit is shown by flashing that digit.

The Increment (▲) key is used to increment the selected digit. The increment key Increments the digit from 0 to 9 and then wraps down to zero once again. Shift and Increment keys are also used for selecting the required parameter.

Once the required values are set in the configuration items press the Enter ◀ key to store it in memory. If the change is accepted the display Indicates 'E' otherwise an error message is displayed as 'Error'.

Once the configuration Items are programmed hold in the ► & ▲ keys together for 3 seconds to return back to normal operating mode.

5. Programming Instructions

All meters are to be programmed properly to work in a particular Installation. The various items that are to be programmed are shown in the table below.

Configuration Item	In Meter
<i>New pass word</i>	<i>All meters</i>
<i>Primary Voltage</i>	<i>In HT meters only</i>
<i>Primary Current</i>	<i>In All meters</i>
<i>Device Id</i>	<i>Meters with Communication Interface only</i>
<i>kWh & Run Hour reset</i>	<i>All meters</i>

The Meters are provided with password facility to prevent alteration of configuration items by unauthorised persons. The configuration Items of the meter may be changed by following the sequence given below.

With power applied to the meter hold in the ► & ▲ keys (shift and Incr) together for 3 seconds. The display Indicates enter password

PROG PASS WORD / / / /

The password set in the menu, “new password” has to be entered by using Shift, Incr and enter keys (Refer changing the configuration items for using Shift, Incr and Enter keys). After valid password is entered the meter enters into program mode by showing it in display.

PROGRAM MODE

Special Note :

*If the user enters the ‘Enter pass word’ for the first time, or if the user fails to remember the password entered in ‘New pass word’, the default password **0386** can be entered.*

The configuration Items can be selected by pressing the Index (#) key. Top row in displays are used to differentiate the various configuration items. The displays for various configuration item are given below,

NEW PASS WORD
0 0 0 0

Press # Key

Password to prevent unauthorised persons entry (Range : 0000 - 9999; for all meters)

VOLTAGE SET
0 1 1 0 0 0

Press # Key

Primary Voltage setting (only in HT meters)
(Range : 0 - 330000V AC)

CURRENT SET
0 1 0 0

Press # Key

Primary current setting
(0000 - 9999)A AC

DEVICE ID SET
0 0 1

Press # Key

Device address (for meters with communication interface only ; 001 - 255)

**LCD POWER SAVE
ENABLED**

Press # Key

LCD Power save Enabled/Disabled is selected using Shift or Increment key and pressing Enter key. *(If it is Enabled, then backlit is automatically switched off when there is no any key press for 3 minutes. Pressing any key will make backlit ON. If LCD power save is Disabled, then backlit is switched on permanently)*

KWH RESET SURE

kWh Energy Reset. *(pressing Enter key resets energy & Run Hour and displays "DONE" in Bottom Row)*

Again pressing Index (#) key repeats the same process in cyclic manner. Press ► & ▲ keys (Shift & Increment) together for few seconds to quit program mode & return to RUN mode.


6. RUN Mode display pages

When power is applied to the meter the starting message consisting of Manufacturer's name, model number, version number and meter type is displayed and the run mode is selected automatically. In Run mode the power parameters are shown in different pages. These pages are accessed using the "Page UP & DOWN" keys provided on the front panel. The display pages, can also be made to scroll automatically 5 seconds once by selecting scroll mode by pressing scroll/hold key. The Scroll or Scroll/Hold key toggles between Scroll & Hold mode. The available display pages are given below.


Page 1 :




Page 2 :

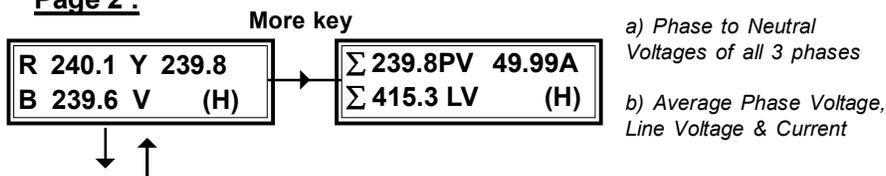


Page 3 :

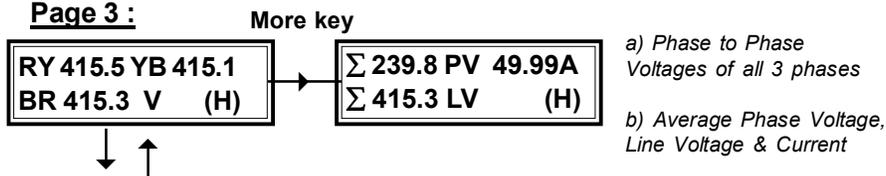

Page 4 :

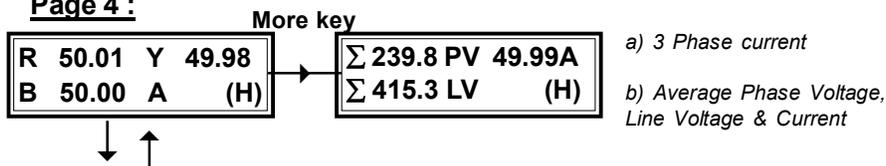

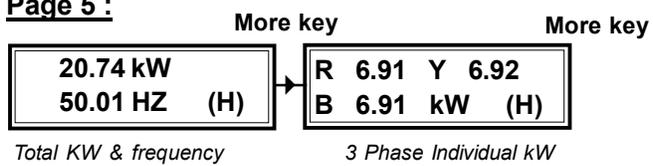Page 5 :

The above pages are given for 3 phase 4 wire LT meters. For HT meters, the resolution and units will change as given in technical specifications. The display pages sequence and parameters can be altered based on user requirement (to be mention while ordering).

7. Communication Port Details

The Meter is provided with a optically Isolated RS 485 communication Port, which is an optional Feature and has to be specified at the time of ordering. The communication protocol used is MODBUS - RTU or MODBUS-ASCII (to be specified while ordering). Using the communication Port, the meters can be connected in multi drop network and data can be collected in a centralised control room using any standard SCADA Software.

The communication between the PC and the instrument would be in Master slave mode. P.C acts as a master and sends a command message (query) containing the slave Id, function code and address of the information required. The command is received by all the slaves. The slave whose address is matching with that of the command address would respond with the requested data.

The communication settings are,

Protocol	:	MODBUS RTU
Baud rate	:	9600
Data bit	:	8
Starting Address	:	40001
No. of Elements	:	4
Data Type	:	UNIT
Communicating mode	:	Half Duplex

The above configuration are to be done in any standard scada package for collecting the data.

The instrument is provided with screwable 3 pin wago connector for connecting the communication cable at the rear side. Terminal details are (From top to Bottom)

	Ground
	D-
	D+

The address of the parameters are as follows for LT & HT (3W), for other wirings, some of the parameters are not shown and the elements relevant to that parameters are not used.

<u>Sl.No</u>	<u>Parameter</u>	<u>Address</u>	<u>Resolution</u>	
			<u>LT</u>	<u>HT</u>
1	Σ kW	40001	0.1	1
2	kWh MSB	40002	0.1	1
3	kWh LSB	40003	0.1	1
4	Meter Type / Runhour MSB	40017		
5	Runhour LSB	40018		

a) Σ kWh Calculation : $\Sigma \text{ kWh} = (\text{kWh MSB} * 65536) + \text{kWh LSB}$

b) Meter Type / Runhour MSB : 256


c) Q = Meter Type : 03 = LT Meter ; 04 = HT Meter

d) Total Runhour : $(\text{Runhour MSB} * 65536) + \text{Runhour LSB}$

7.1 Communication connection diagram


When connecting the meters in multidrop communication network, the following methods are to be adopted for trouble free communication.

1. Loop Topology

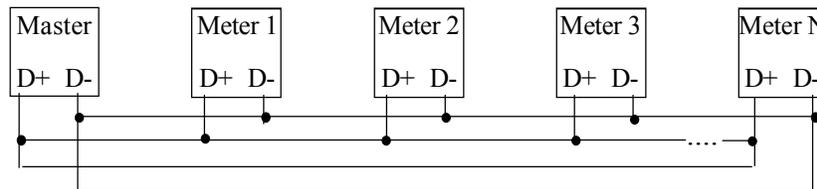

In this method, the communication continues to work even if there is a breakage in any one of the Loop. Termination resistors are not required.

2. Straight line Topology

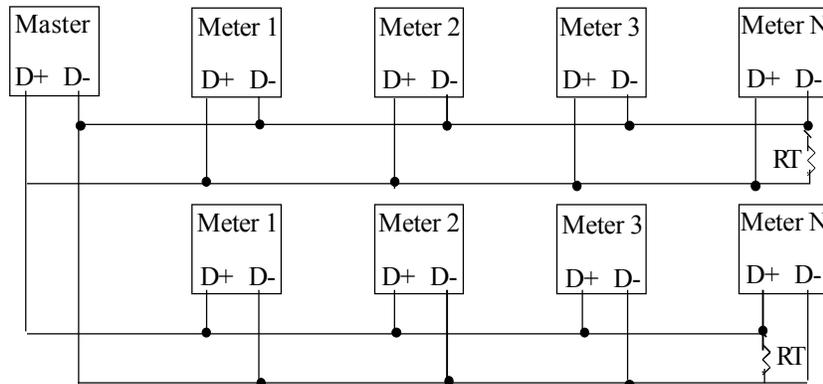

In this method, a termination resistor R_T (60 - 100 Ω) of a value equal to the characteristic impedance of the cable used may be required to avoid reflection losses.

It is recommended to use proper & suitable communication cable for trouble free communication.

8. Technical specification (class 0.5 & Class 1)

Type	: ICD make MULTI FUNCTION METER
Application	: LT / HT Application
Model	: MFM 9012
Voltage Input (Line to Line)	: LT : 415 AC RMS (-20% to +10%) HT : 110V AC RMS (-20% to +10%)
Current Input	: 5AAC R.M.S. (Standard) 1AAC R.M.S. available as ordering option.
Over Load Capacity	: 10A Max continuous, 50A max for 3 seconds
Working Load Range	: 0.5% to 120% of load current
Frequency	: 40.00 to 60.00Hz
Measurement Method	: 3 Watt Meter (Standard)
Accuracy	: Class 0.5 or Class 1 as per IS 14697
Display	: 2 row 16 character LCD Display with Backlit
Character Size	: 4.35(H) x 2.95(W) mm
LCD Power Save	: Provided, when no key is operated for 3 minutes the LCD backlit is switched OFF to save power and to enhance the life of LCD. The backlit is switched ON, when any key is pressed.
Programmable Parameter	: PT primary Voltage (HT meters), CT Primary current, Device ID, Energy & Runhour Reset facility with password protection
Parameter storage	: In non-volatile EERAM
Phase Reverse Indication:	Provided by showing minus sign in Instant kW
Energy Registering during Reverse	: Not done
Display page selection	: By set of keys provided in front panel.
Calibration pulse O/P	: Provided thru' IR LED in front panel
Meter Constant	: 3200imp/kWh

Burden on Voltage I/P : 0.25VA per phase
 Burden on Current I/P : 0.25 V A per phase
 Burden on Auxiliary I/P : 4 V A
 THD Accuracy : $\pm 2\%$ OFS for % values (for loads > 20%)
 Auxiliary Supply : 90 - 270 VAC

Parameter displayed : (Class 1)

Parameter	Range	Resolution	Accuracy
R, Y, B Voltage	50 - 300 V AC	0.1 V (LT)	$\pm 1\% + 2$ Least digit
	15 - 80 V AC	0.01kV (HT)	$\pm 1\% + 2$ Least digit
RY, YB, BR Voltage	90 - 520 V AC	0.1 V (LT)	$\pm 1\% + 2$ Least digit
	25 - 140 V AC	0.01kV (HT)	$\pm 1\% + 2$ Least digit
Current	0 - 100 A AC	0.01 A (LT & HT)	$\pm 1\% + 2$ Least digit
	> 100 A - primary current (CT) set	0.1 A (LT & HT)	
KW (LT) 3 Phase & total	0 - 100 KW	0.01KW	$\pm 1\% + 2$ Least digit
	> 1000 KW	0.1KW	$\pm 1\% + 2$ Least digit
kVA/KW/kVAr(HT) 3 Phase & total	0-10000kVA/KW/ kVAr	1kVA/KW / kVAr	$\pm 1\% + 2$ Least digit
	> 10000 kVA/KW/ kVAr	0.01 MVA/MW/MVAr	$\pm 1\% + 2$ Least digit
Frequency	40.00 - 60.00 Hz	0.01Hz(LT & HT)	$\pm 0.2\% + 2$ Least digi
kWh	99999999.99 kWh	0.01kWh (LT)	Class 1 as per IS 14697 ($\pm 1\%$)
	99999999 kWh	1kWh (HT)	
Run Hour	9999.59 Hours Max.	1 Minute	± 3 sec/day

Parameter displayed : (Class 0.5)

Parameter	Range	Resolution	Accuracy
R, Y, B Voltage	50 - 300 V AC	0.1 V (LT)	±1%+2Least digit
	15 - 80 V AC	0.01kV (HT)	±1%+2Least digit
RY, YB, BR Voltage	90 - 520 V AC	0.1 V (LT)	±1%+2Least digit
	25 - 140 V AC	0.01kV (HT)	±1%+2Least digit
Current	0 - 100 A AC	0.01 A (LT & HT)	±1%+2Least digit
	> 100 A - primary current (CT) set	0.1 A (LT & HT)	
KW (LT) 3 Phase & total	0 -100 KW	0.01KW	±1%+2Least digit
	>1000 KW	0.1KW	±1%+2Least digit
kVA/KW/kVAr(HT) 3 Phase & total	0-10000kVA/KW/ kVAr	1kV A/KW / kVAr	±1%+2Least digit
	>10000 kVA/KW/ kVAr	0.01 MVA/MW/MVAr	±1%+2Least digit
Frequency	40.00 - 60.00 Hz	0.01Hz(LT & HT)	±0.2%+2Least digit
kWh	99999999.99 kWh	0.01kWh (LT)	Class 1 as per IS 14697 (±1%)
	99999999 kWh	1kWh (HT)	
Run Hour	9999.59 Hours Max.	1 Minute	± 3 sec/day

PC Interface (Optional) : An optically isolated RS 485 O/P is available with MODBUS-RTU (MODBUS ASCII, RJ45 are provided as ordering option)

Isolation : 2 kV Isolation for 1 minute between communication and other circuits.

Operating Temperature : 10°C to 55°C

Box Dimension : 96(W) x 96(H) x 80(D) mm (Cutout : 92x92mm)

Mounting : Panel

Enclosure / Weight : ABS Plastic case / 325g (Approximately)